 





CR-Infinity Guide


Entering the Property with a Card/Fob

Tap the credential card/fob against the Reader to unlock it.

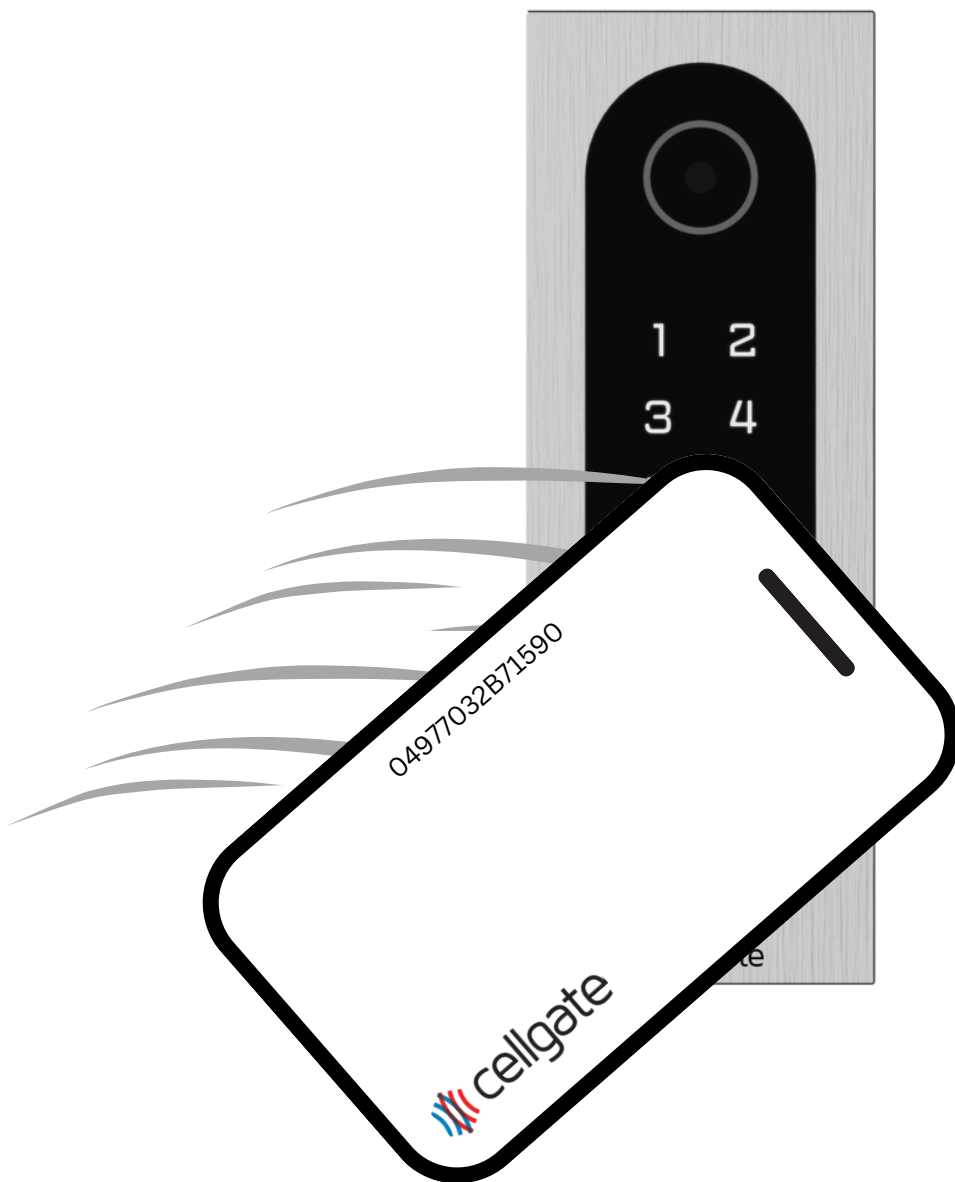

Entering the Property with Bluetooth


1. Download the CellGate application. 
2. Open the menu, click **Virtual Keys**, then **Personal Keys**.
3. When prompted, allow CellGate to use Bluetooth.
4. Click **Enable Bluetooth Background Access**.

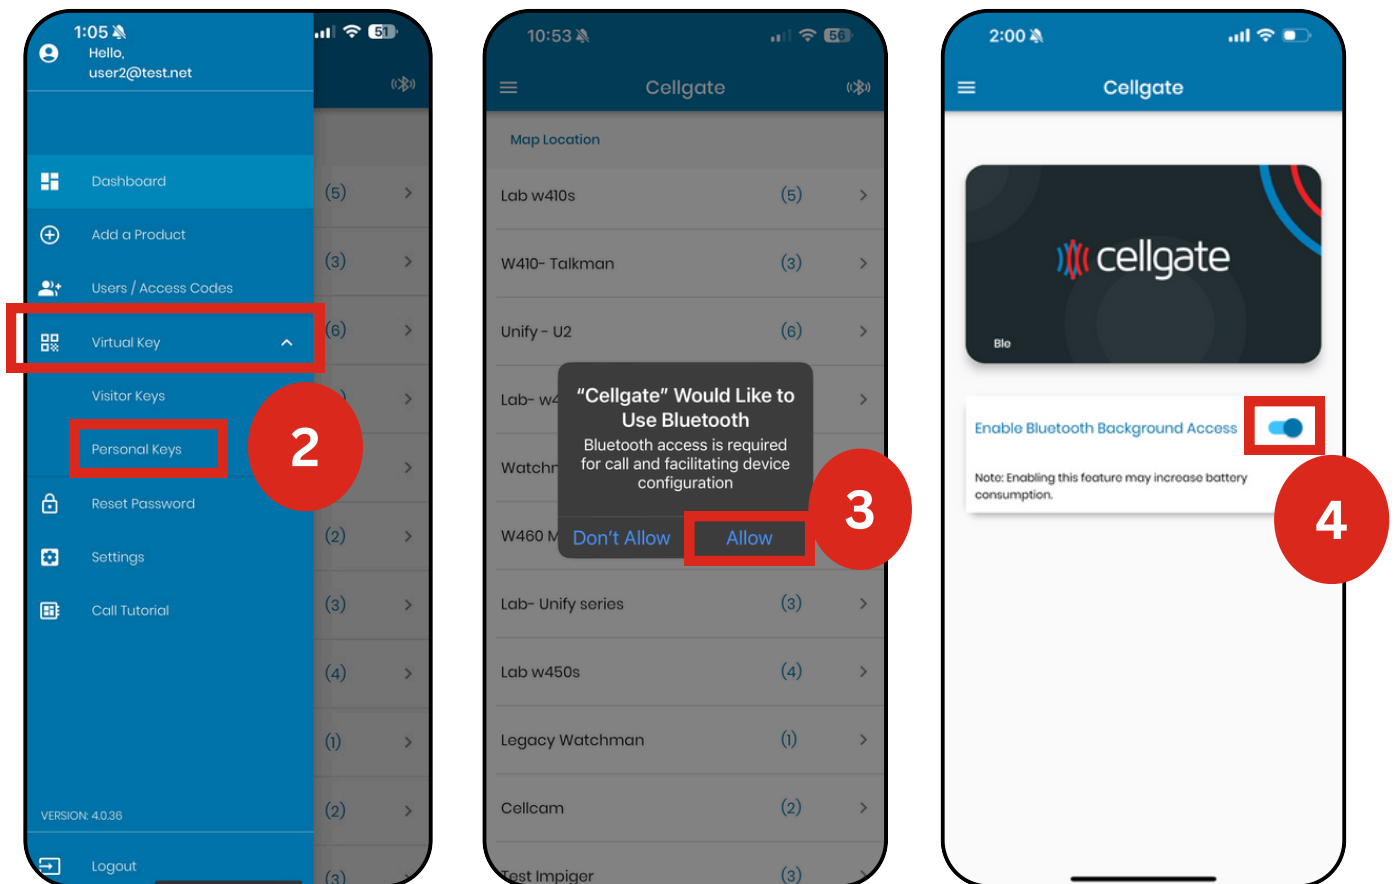

5. Your phone is now ready for Bluetooth access.
6. To enter the property, have the phone on your person and wave in front of the device.

Entering the Property with an Access Code

Type the access code into the Reader and click the Enter button.

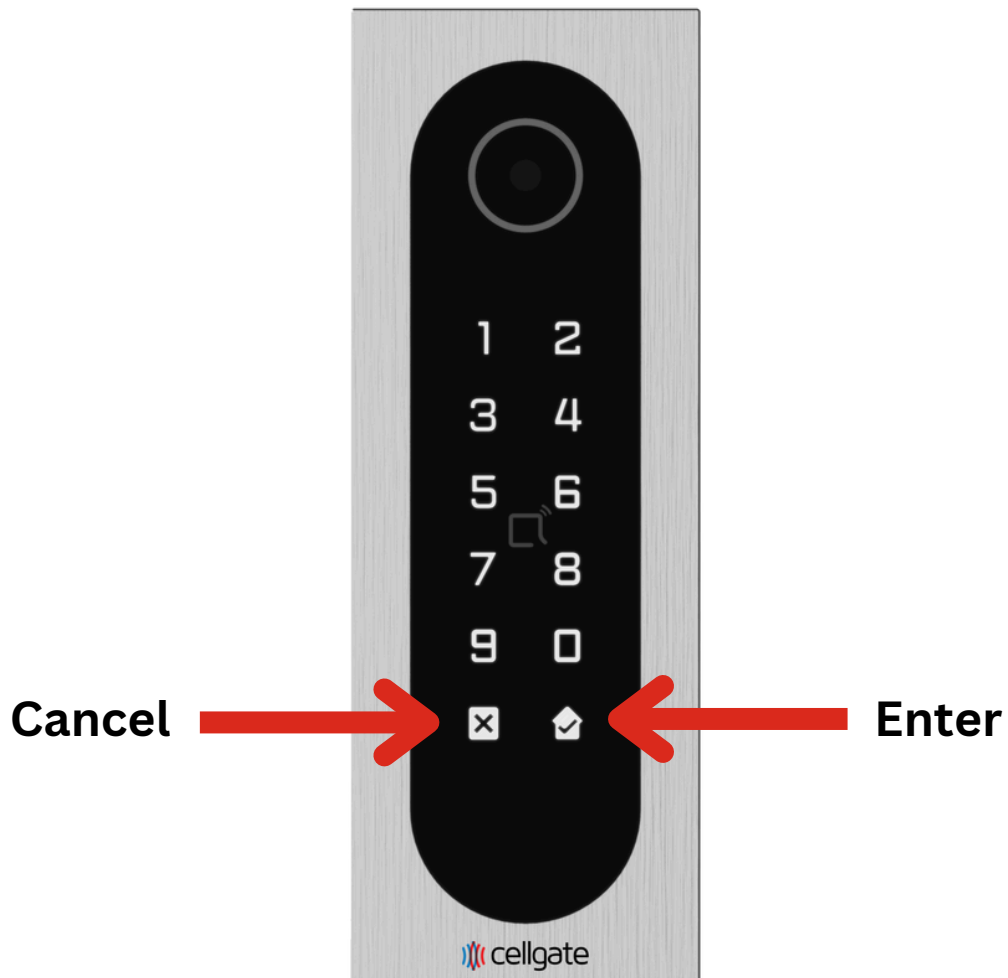

Entering the Property with a QR Code

1. You will receive a text or email with a link.
2. Click the link and hold up the QR code in front of the Reader sensor.

