



CR-Keypad Guide

Entering the Property with a Card/Fob

Tap the credential card/fob against the Reader to unlock it.



Entering the Property with an Access Code

Type the access code into the Reader and click the Enter button.

