



CellGate Reader Configuration Guide

Infinity & Halo

Login to the Device

Have the customer technician perform the following steps:

1. Access the back of the device.
2. Connect a laptop to the Reader via an Ethernet cable.




Infinity



Reader


The CellGate technician performs the following steps:

3. Start a Splashtop session. (See Splashtop Session Training documentation.)
4. They will have a set IP address: 192.168.0.110
5. Enter this IP address into your web browser and press **Enter**.
6. You will be brought to a login page.

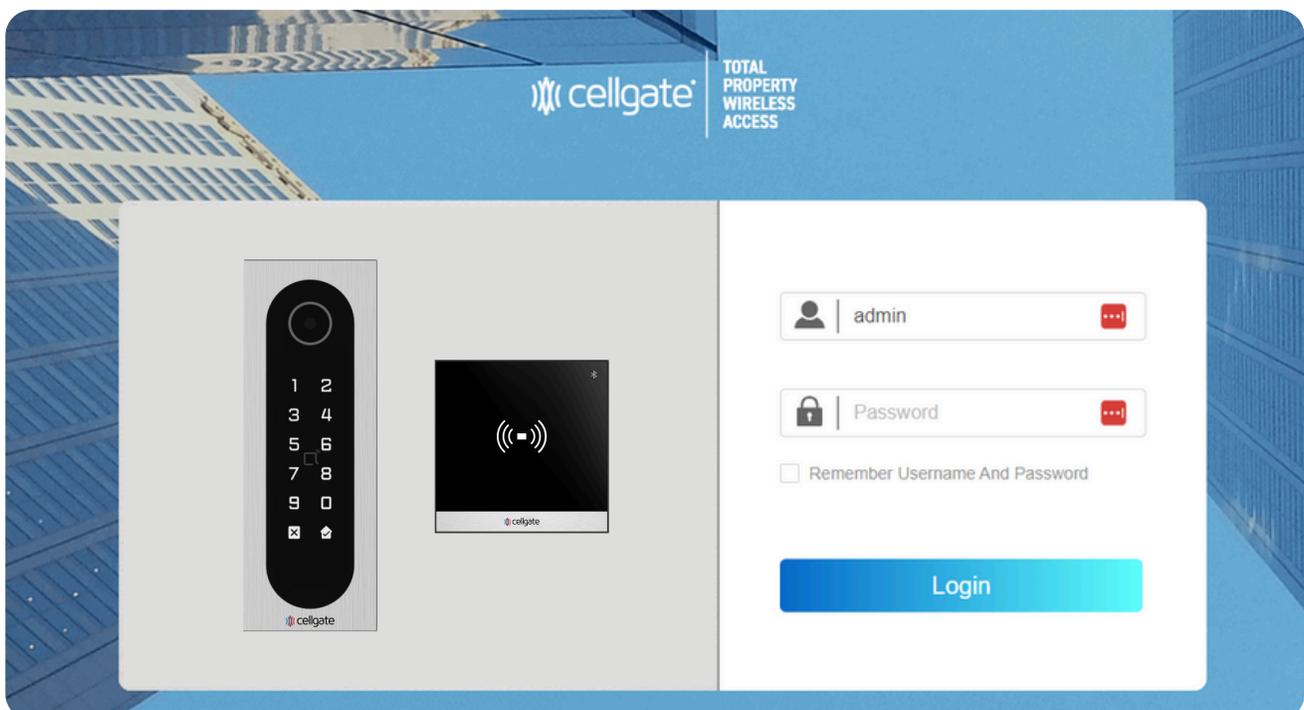


Configure Settings

On the Main Menu, click the **Access Control** box.

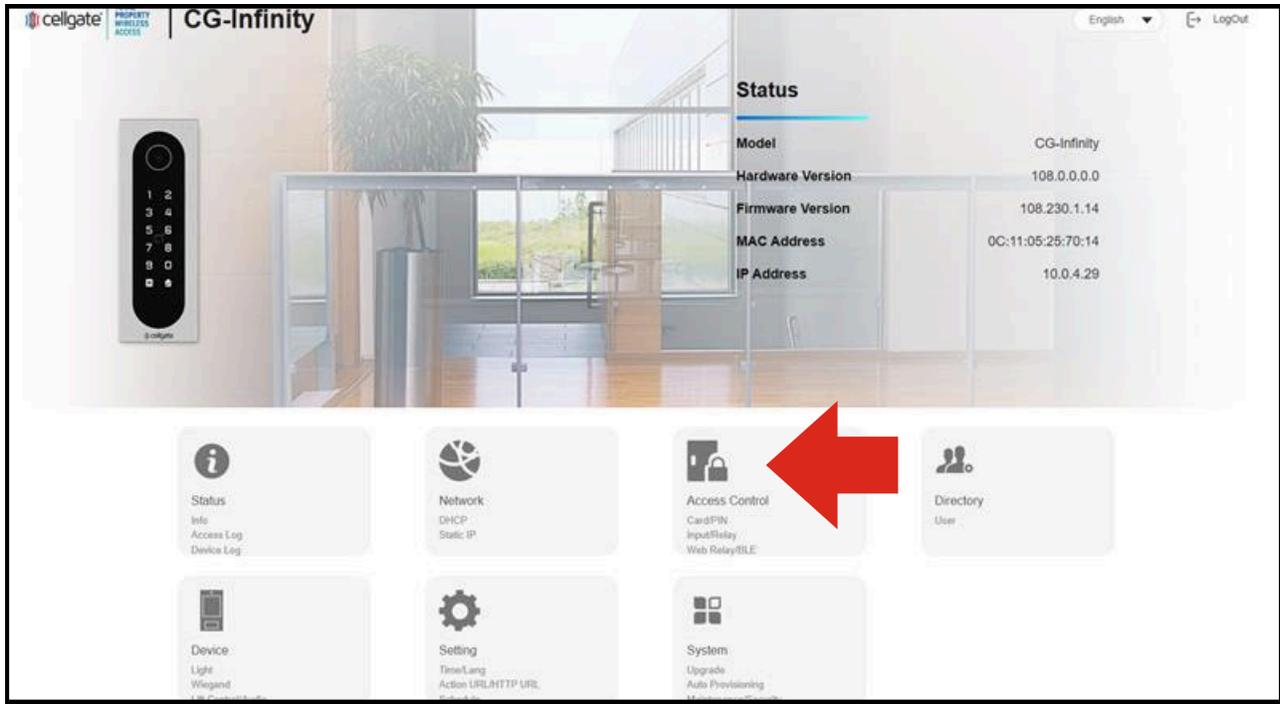

- To change Bluetooth settings: Click the **BLE Unlock Mode**.

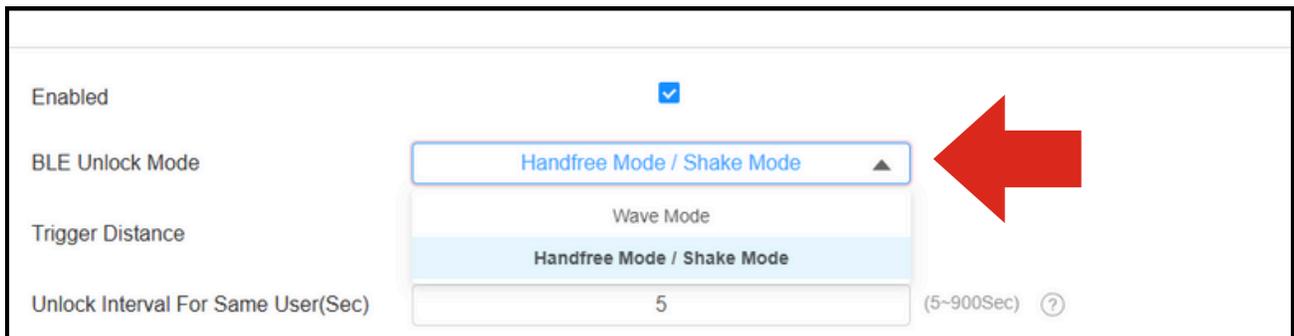

- To change the distance of the Reader's scan: Click **Trigger Distance**.

